


Residents/homeowners will need to complete prep work at the home before Baldwin LightStream can plow a Fiber drop. This prep work will indicate to our crews where they should connect the main line to your home. You will need a:

- 1" PVC pipe from where the Network Interface Location (NIL) will be located to the outside of your home.
 - The pipe needs a LB on the outside pointing up for the Splice Point location.
 - The outside riser pipe from the LB should be between 46" and 60" high and capped (not glued).
 - The outside of the pipe going into the home should be sealed with silicone.
- 2' x 2' clear space for mounting the ONT and Router
- 110-volt outlet at the NIL

You may hire Baldwin LightStream to complete the prep work for \$105.50.

Now through July 31st, fiber prep appointments can be requested by scanning the QR code on the first page or by calling 877-684-3346.

Please call 877-684-3346 or email fiber@lswi.net if you have any questions about the requirements.

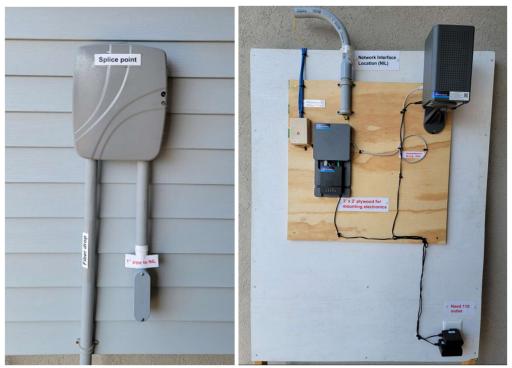

715-684-3346

930 MAPLE STREET, BALDWIN WI 54002